

ELE<TROMASTER




Dough Roller - Model CLM-300L

Instruction Manual

Instruction Manual

Index

1.Introduction	02
1.1 Safety	02
1.2 Main components	02
1.3 Technical Characteristic	03
2. Installation and Pré-Operation	03
2.1 Installation	03
2.2 Pre-operation	04
2.3 Proceedings for feeding	05
3. Regular Operation	05
3.1 Switching on	05
3.2 Dough thickness control	06
3.3 Cleaning	06
4. General Safety Rules	07
4.1 Basic operational practice	07
4.2 Precautions and remarks before switching on the machine	08
4.3 Routine Inspection	09
4.4 Operation	09
4.5 After work is done	10
4.6 Maintenance Operation	10
4.7 How to proceed in case of EMERGENCY	10
4.8 Warnings	11
5. Problem Analysis and Solutions	11
5.1 Problems, causes and solutions	11
6. Electrical Diagram	12

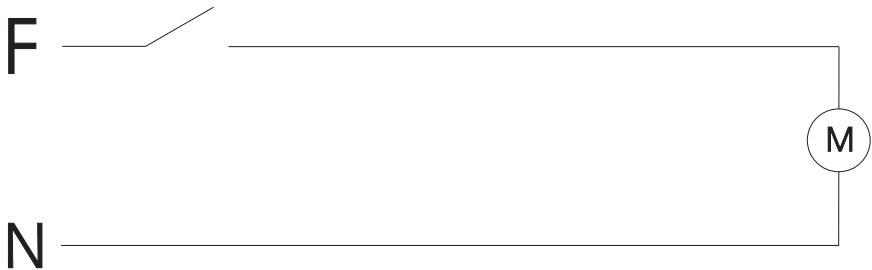

1. INTRODUCTION

1.1 Safety

When improperly used the Dough Roller Model CLM-300L is a potentially DANGEROUS equipment. Never place your hand inside the upper opening through which the dough is introduced to feed the machine. Cleaning and maintenance or any other operation with the machine shall be carried out by trained personel. In order to avoid accidents follow the instructions below:



1.1.1 Be sure the machine is plugged off the electric network when cleaning, maintenance or any service is being made.

1.1.2 Never use direct water spray on the machine.

1.2 Main Components

The Dough Roller Model CLM-300L is a machine to be used on a bedplate or a solid table to roll different kinds of dough.

Most of the components which are part of the machine, are manufactured with high performance raw materials : stainless steel, aluminum or plastic.



Pic - 01

4.8 Warnings

The electrical and mechanical maintenance has to be performed by skilled personnel. The person in charge has to be sure that the machine is under perfect working and safe conditions before it is switched on.

5. PROBLEMS ANALYSIS AND SOLUTIONS

5.1 Problems, causes and solutions

The CLM-300L Dough Roller was designed to need minimum maintenance however some performance failures may occur due to operational wearing. Please refer to Table- 02 below in which the main possible problem/solution situations are described. Besides the Company is ready to assist you through your Dealers as well as the Company Technical Assistance network.

Table - 02

*The laminated product got stuck in between the rollers	*Deregulated scrapers	* Call technical assistance
* Rollers stop during operation	*on/off button with bad contact *Cord or outlet with bad contact *No power	*Check if machine is plugged in outlet * Call technical assistance *Check if cord is in perfect conditions, check the pins of the plug

4.5 After work is done

4.5.1 Always clean the machine after the operation.
UNPLUG THE MACHINE FROM THE OUTLET.

Never clean the machine unless the rollers have come to a COMPLETE STOP.

Replace all parts on its proper position before turning it on again.

Check level of oil.

When checking the tension of the rubber belt(s) and chain(s) never INTRODUCE your fingers between the belt(s) and the pulleys , neither between the (chain(s) and the gears.

4.6 Maintenance Procedure

Any maintenance operation is dangerous when the machine is on. TURN IT OFF BY UNPLUGGING THE MACHINE FROM THE OUTLET.

4.7 EMERGENCY - How to proceed

In case of EMERGENCY turn the machine off IMMEDIATELY by pressing on the on/off switch on the upper part of the machine. The rollers will stop right away. Then you turn the thickness control handle to its maximum width thus allowing a wider distance between the rollers.

IMPORTANT

Immediately unplug the machine from the outlet in case of emergency. Never turn the machine on when the reversion handle is fixed in the pinion.

Pic - 02



1.3 Technical Characteristics

Table -01

Characteristics	Unit	CLM-300L
Maximum load capacity	[Kg]	2
Voltage	[V]	110 or 220
Frequency	[Hz]	50 or 60 (*)
Motor rating	[CV]	½
Consumption	[kW/h]	0,368
Height	[mm]	590
Width	[mm]	500
Depth	[mm]	550
Net weight	[kg]	20
Gross weight	[kg]	35

(*) Frequency and voltage will be in accordance with the supplied electric motor .

Load Chart

Model	Maximum Load
CLM-300	2kg dough
CLM-300L	2kg dough

2. INSTALLATION AND PRE-OPERATION

2.1 Installation


The Dough Roller must be placed on a firm working table, preferably 850 mm high and 350 mm far from the operator.

Be sure the voltage is adequate. The electricity source shall have the same voltage as the Dough Roller electric motor .

The power cable is provided with a plug with two round pins and a grounding wire.

It is mandatory that the three points be connected before the machine is started.

Pic - 03

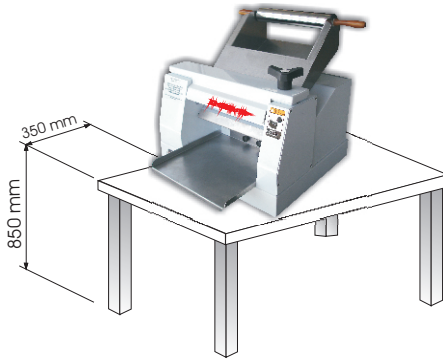

2.2 Pre Operation

Important
Under no circumstances do the cleaning when the machine is working.

First make sure the Dow Roller is firm in its position. Clean the rolls with a dry cloth and if necessary with a plastic slice.

Pic - 04



4.2.2 Warning

Be sure that the contents of this manual are all well and fully understood. Every operational function or proceeding has to be clear.

The operator has to be well aware of the functions of each key or button that is being touched. The operator has to know which is the right command to be started.

The electrical cable in use has to be adequate to hold the power of the motor

Electrical cord on the floor or near the machine must be protected , to avoid short circuits .

Oil reservoirs have to be on their adequate level. Check and add oil when necessary.

4.3 Routine Inspection

When checking the tension of the rubber belt(s) DO NOT put your fingers between the belts and neither between the gears.

Check if motor(s) , sliding and turning parts are producing abnormal noises.

Check tension of rubber belt(s) and chain(s), and change the whole set if any belt or chain is worn out .

DO NOT introduce your fingers between the belt(s) and the pulley (ies) , neither between the chain(s) and the gear (s).

4.4 Operation

Do not work with loose long hair, that could get caught by parts of the machine and thus cause serious accidents. Tight the hair behind and above the head, or cover them with a scarf .

Only qualified and well trained operators may operate the machine.

NEVER operate the machine without all original safety devices in perfect conditions.

Never touch or give any manual command at random .

If the operation is performed by more than one operator be sure that signs of communication are clear and well understood. A following operation can procede only when the sign between operators was made and understood.

4.1.3 General

Immediately turn the machine off in case of electrical power failure.

Use only recommended oil lubs and grease or eqüivalent.

Avoid mechanical shocks which may affect the good performance of the machine.

Avoid the penetration of water, dirt or dust on electrical or mechanical components of the machine.

Do not change original characteristics of the machine.

Preserve all warning and identification signs. Do not remove any and make sure the stickers are clean and clear. Contact your nearest Technical Assistant if any has been removed or torn.

4.2 Care and observations before switching on the Dough Roller

Important

Read carefully and with attention all the contents of this Manual before turning the machine on. Be sure all instructions were well understood. If any doubts arise contact your next responsible person , or contact the Dealer.

Damaged electrical wire or cable may cause leakage and electrical shocks. Be sure to check the conditions of the wiring.

2.3 Feeding Procedures

Important

Under no circumstances use your hands to directly put or remove any portion of dough in between the cylinders.

The Roller model CLM -300 brings a safety system that prevents fingers from touching the rolls when feeding the machine turned ON. Therefore, the machine will only work if the mentioned roll protection is turned down.

To feed the Roller, the product to be laminated must be placed onto the gutter, and guided until it is pulled by the rolls when the machine is turned on.

Pic - 05



Pic - 06



3. NORMAL OPERATION

3.1 Switching On

Important

Wait until the rollers come to a complete stop. The machine operates in silence. Do not place any objects such as knives, spoons or other when the machine is not in operation.

To start the machine press the button of the ON/OFF switch, on the upper side of the machine .

3.2 Setting the thickness of the dough

In order to determine the thickness of the dough, turn the thickness control handle according to the desired measure.

Pic - 07



3.3 Cleaning

Important

Never do any cleaning when machine is plugged to the electrical network. To do the cleaning unplug it . Be sure the rollers are completely motionless.

For cleaning turn the machine off, unplug it from the electrical network. All parts that were touched by dough will have to be cleaned.

3.3.1 Clean all parts that have contact with the dough with a dry cloth.

3.3.2 Never use objects such as knives, forks and other cutting or punching tools to remove dough that is stuck in between the rollers. Use a plastic slice for cleaning or removing dough.

4. GENERAL SAFETY RULES

General Safety Rules were developed to more adequately clarify and instruct operators and maintenance personnel.

The machine has to be handed over to the operator in good working conditions. Also the operator has to be properly instructed concerning the use and safety of the machine by the Dealer. The operator should not use the machine before getting fully familiar with the whole contents of this Instruction Manual.

4.1 Basic Operational Practice

4.1.1 CAUTION

Some parts are connected to electricity and may cause fatality when touched due to high voltage.

Never touch buttons, switches and keys with wet hands, shoes or clothes. Such recommendation not being followed may cause electric shocks and even fatality.

4.1.2 Warning

It is important to know exactly the place where the on/off switch is installed on the machine without having to search for it in case of emergency.

Before any maintenance procedure, be sure the machine is plugged off the network.

A safe and large working area shall be provided to avoid dangerous falls .

Water and oil on the floor will turn it slippery and dangerous. Be sure the floor is clean and dry.

Before turning on any switch (buttons, keys and switches) be sure the operation is correct. Check this manual if any doubt arises.